



Battery Price List

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

Synergy Digital Battery Price List

| ITEM # | BRAND | BRAND CODE | TYPE | mAh | VOLTAGE | PRICE | UPC CODE |
|------------|-------|-----------------|--------|------|---------|---------|-----------------|
| SDNPF570 | SONY | NP-F570 | Li-ion | 2300 | 7.4V | \$16.00 | 8 76544 00375 9 |
| SDNPF770 | SONY | NP-F770 | Li-ion | 4600 | 7.4V | \$20.00 | 8 76544 00376 6 |
| SDNPF970 | SONY | NP-F970 | Li-ion | 6900 | 7.4V | \$29.00 | 8 76544 00377 3 |
| SDNPFH50 | SONY | NP-FH50 | Li-ion | 900 | 7.4V | \$11.00 | 8 76544 00464 0 |
| SDNPFH70 | SONY | NP-FH70 | Li-ion | 1800 | 7.4V | \$14.00 | 8 76544 00425 1 |
| SDNPFH100 | SONY | NP-FH100 | Li-ion | 4500 | 7.4V | \$18.00 | 8 76544 00426 8 |
| SDNPF70 | SONY | NP-FF70 | Li-ion | 1500 | 7.4V | \$16.00 | 8 76544 00304 9 |
| SMNPFM55H | SONY | NP-FM55H | Li-ion | 1800 | 7.2V | \$16.00 | 8 76544 00911 9 |
| SDNPFM500H | SONY | NP-FM500H | Li-ion | 1700 | 7.4V | \$16.00 | 8 76544 00452 7 |
| SDNPFM50 | SONY | NP-FM50 | Li-ion | 1500 | 7.4V | \$16.00 | 8 76544 00305 6 |
| SDNPFM90 | SONY | NP-FM90 | Li-ion | 3900 | 7.4V | \$19.00 | 8 76544 00307 0 |
| SDNPFV50 | SONY | NP-FV50 | Li-ion | 1030 | 7.4V | \$16.00 | 8 76544 00479 4 |
| SDNPFV70 | SONY | NP-FV70 | Li-ion | 2060 | 7.4V | \$21.00 | 8 76544 00480 0 |
| SDNPFV100 | SONY | NP-FV100 | Li-ion | 3100 | 7.4V | \$26.00 | 8 76544 00481 7 |
| SDNPFW50 | SONY | NP-FW50 | Li-ion | 1500 | 7.4V | \$14.00 | 8 76544 00495 4 |
| SDNPQM71D | SONY | NP-QM71D | Li-ion | 2800 | 7.4V | \$18.00 | 8 76544 00308 7 |
| SDNPQM91D | SONY | NP-QM91D | Li-ion | 4500 | 7.4V | \$20.00 | 8 76544 00309 4 |
| SDNPFA50 | SONY | NP-FA50 | Li-ion | 700 | 7.4V | \$15.00 | 8 76544 00358 2 |
| SDNPFA70 | SONY | NP-FA70 | Li-ion | 1220 | 7.4V | \$17.00 | 8 76544 00359 9 |
| SDNPFC11 | SONY | NP-FC11 | Li-ion | 800 | 3.7V | \$10.00 | 8 76544 00311 7 |
| SDNPFT1 | SONY | NP-FT1 | Li-ion | 780 | 3.7V | \$9.00 | 8 76544 00312 4 |
| SDNPF50 | SONY | NP-FP50 | Li-ion | 800 | 7.4V | \$12.00 | 8 76544 00313 1 |
| SDNPF70 | SONY | NP-FP70 | Li-ion | 1600 | 7.4V | \$15.00 | 8 76544 00314 8 |
| SDNPF90 | SONY | NP-FP90 | Li-ion | 2400 | 7.4V | \$19.00 | 8 76544 00315 5 |
| SDNPF511 | SONY | NP-FS11 | Li-ion | 1400 | 3.7V | \$12.00 | 8 76544 00360 5 |
| SDNPF1 | SONY | NP-FE1 | Li-ion | 550 | 3.7V | \$10.00 | 8 76544 00364 3 |
| SDNPF1 | SONY | NP-FR1 | Li-ion | 1230 | 3.7V | \$10.00 | 8 76544 00316 2 |
| SDNPBG1 | SONY | NP-BG1 | Li-ion | 1200 | 3.7V | \$10.00 | 8 76544 00424 4 |
| SDNPBD1 | SONY | NP-BD1 | Li-ion | 800 | 3.7V | \$10.00 | 8 76544 00451 0 |
| SDNPBK1 | SONY | NP-BK1 | Li-ion | 1100 | 3.7V | \$10.00 | 8 76544 00454 1 |
| SDNPBN1 | SONY | NP-BN1 | Li-ion | 1300 | 3.7V | \$15.00 | 8 76544 00482 4 |
| SDBP511 | CANON | BP511 | Li-ion | 1500 | 7.4V | \$8.00 | 8 76544 00902 7 |
| SDBP522 | CANON | BP522 | Li-ion | 3000 | 7.4V | \$16.00 | 8 76544 00318 6 |
| SDBP535 | CANON | BP535 | Li-ion | 4200 | 7.4V | \$19.00 | 8 76544 00319 3 |
| SDBP2L12 | CANON | BP2L12 | Li-ion | 1500 | 7.4V | \$13.00 | 8 76544 00320 9 |
| SDBP915 | CANON | BP915 | Li-ion | 2000 | 7.4V | \$12.00 | 8 76544 00321 6 |
| SDBP930 | CANON | BP930 | Li-ion | 4000 | 7.4V | \$23.00 | 8 76544 00322 3 |
| SDBP945 | CANON | BP945 | Li-ion | 6000 | 7.4V | \$28.00 | 8 76544 00323 0 |
| SDBP308 | CANON | BP308 | Li-ion | 900 | 7.4V | \$11.00 | 8 76544 00389 6 |
| SDBP208 | CANON | BP208 | Li-ion | 1000 | 7.4V | \$11.00 | 8 76544 00391 9 |
| SDBP315 | CANON | BP315 | Li-ion | 1700 | 7.4V | \$14.00 | 8 76544 00390 2 |
| SDBP809 | CANON | BP809 | Li-ion | 900 | 7.4V | \$17.00 | 8 76544 00468 8 |
| SDBP819 | CANON | BP819 | Li-ion | 2000 | 7.4V | \$26.00 | 8 76544 00469 5 |
| SDBP827 | CANON | BP827 | Li-ion | 2700 | 7.4V | \$32.00 | 9 76544 00470 1 |
| SDBP110C | CANON | BP110 w/charger | Li-ion | 1500 | 3.7V | \$13.00 | 8 76544 02219 4 |



Battery Price List

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

| ITEM # | BRAND | BRAND CODE | TYPE | mAh | VOLTAGE | PRICE | UPC CODE |
|------------|-----------|------------|--------|------|---------|---------|-----------------|
| SDNB1LH | CANON | NB1LH | Li-ion | 1000 | 3.7V | \$7.00 | 8 76544 00325 4 |
| SDNB2LH | CANON | NB2LH | Li-ion | 900 | 7.4V | \$8.00 | 8 76544 00901 0 |
| SDNB3L | CANON | NB3L | Li-ion | 800 | 3.7V | \$7.00 | 8 76544 00327 8 |
| SDNB4L | CANON | NB4L | Li-ion | 900 | 3.7V | \$9.00 | 8 76544 00903 4 |
| SDNB5L | CANON | NB5L | Li-ion | 1200 | 3.7V | \$8.00 | 8 76544 00904 1 |
| SDNB6L | CANON | NB6L | Li-ion | 900 | 3.7V | \$8.00 | 8 76544 00428 2 |
| SDNB7L | CANON | NB7L | Li-ion | 1300 | 7.4V | \$10.00 | 8 76544 00446 6 |
| SDNB8L | CANON | NB8L | Li-ion | 1000 | 3.7V | \$9.00 | 8 76544 00471 8 |
| SDNB5H | CANON | NB5H | NI-MH | 800 | 6.0V | \$7.00 | 8 76544 00362 9 |
| SDNPE3 | CANON | NP-E3 | NI-MH | 2200 | 12.0V | \$26.00 | 8 76544 00329 2 |
| SDLPE4 | CANON | LP-E4 | Li-ion | 2500 | 11.1V | \$35.00 | 8 76544 00429 9 |
| SDLPE5 | CANON | LP-E5 | Li-ion | 1500 | 7.4V | \$10.00 | 8 76544 00430 5 |
| SDLPE6 | CANON | LP-E6 | Li-ion | 2000 | 7.4V | \$16.00 | 8 76544 00455 8 |
| SDLPE8 | CANON | LP-E8 | Li-ion | 1500 | 7.4V | \$10.00 | 8 76544 00472 5 |
| SDLPE10 | CANON | LP-E10 | Li-ion | 1500 | 7.4V | \$10.00 | 8 76544 02219 7 |
| SDNB9L | CANON | NB-9L | Li-ion | 1200 | 3.7 | \$9.00 | 8 7654402204 0 |
| SDNB10L | CANON | NB-10L | Li-ion | 1200 | 7.4 | \$9.00 | 8 76544 02224 8 |
| SDDU14 | PANASONIC | CGA-DU14 | Li-ion | 1600 | 7.4V | \$15.00 | 8 76544 00330 8 |
| SDDU21 | PANASONIC | CGA-DU21 | Li-ion | 2200 | 7.4V | \$18.00 | 8 76544 00331 5 |
| SDCGAS303 | PANASONIC | CGA-S303 | Li-ion | 900 | 7.4V | \$12.00 | 8 76544 00393 3 |
| SDCGAS002 | PANASONIC | CGA-S002 | Li-ion | 800 | 7.4V | \$11.00 | 8 76544 00332 2 |
| SDCGAS005 | PANASONIC | CGA-S005 | Li-ion | 1300 | 3.7V | \$8.00 | 8 76544 00384 1 |
| SDCGAS006 | PANASONIC | CGR-S006 | Li-ion | 1000 | 7.4V | \$12.00 | 8 76544 00388 9 |
| SDCGAS007 | PANASONIC | CGA-S007 | Li-ion | 1300 | 3.7V | \$8.00 | 8 76544 00913 3 |
| SDCGAS008 | PANASONIC | CGA-S008 | Li-ion | 1000 | 3.7V | \$8.00 | 8 76544 00406 0 |
| SDCGRD08 | PANASONIC | CGR-D08S | Li-ion | 1000 | 7.4V | \$12.00 | 8 76544 00369 8 |
| SDCGRD16 | PANASONIC | CGR-D16S | Li-ion | 2000 | 7.4V | \$14.00 | 8 76544 00370 4 |
| SDCGRD28 | PANASONIC | CGR-D28S | Li-ion | 3600 | 7.4V | \$19.00 | 8 76544 00371 1 |
| SDCGRS603 | PANASONIC | CGR-S603 | Li-ion | 1700 | 7.4V | \$14.00 | 8 76544 00403 9 |
| SDCGRD54 | PANASONIC | CGR-D54 | Li-ion | 6000 | 7.4V | \$26.00 | 8 76544 00381 0 |
| SDDMWBMB9 | PANASONIC | DMW-BMB9 | Li-ion | 1000 | 7.4V | \$10.00 | 8 76544 02212 5 |
| SDDMWBCJ13 | PANASONIC | DMW-BCJ13 | Li-ion | 1250 | 7.4V | \$10.00 | 8 76544 02211 8 |
| SDDMWBLB13 | PANASONIC | DMWBLB13 | Li-ion | 1500 | 7.4V | \$15.00 | 8 76544 00457 2 |
| SDDMWBCG10 | PANASONIC | DMWBCG10 | Li-ion | 1200 | 3.7V | \$13.00 | 8 76544 00458 9 |
| SDDMWBCF10 | PANASONIC | DMWBCF10 | Li-ion | 1200 | 3.7V | \$13.00 | 8 76544 00459 6 |
| SDDMWBCH7E | PANASONIC | DMWBCH7E | Li-ion | 695 | 3.7V | \$14.00 | 8 76544 00498 5 |
| SDDMWBLC12 | PANASONIC | DMW-BLC12 | Li-ion | 1500 | 7.4V | \$10.00 | 8 76544 02220 0 |
| SDDMWBLD10 | PANASONIC | DMW-BLD10 | Li-ion | 1200 | 7.4V | \$10.00 | 8 76544 02221 7 |
| SDVWVBG130 | PANASONIC | VW-VBG130 | Li-ion | 1320 | 7.2V | \$21.00 | 8 76544 00483 1 |
| SDVWVBG260 | PANASONIC | VW-VBG260 | Li-ion | 2640 | 7.2V | \$26.00 | 8 76544 00484 8 |
| SDVWVBG6 | PANASONIC | VW-VBG6 | Li-ion | 5400 | 7.2V | \$29.00 | 8 76544 02203 3 |
| SDBCK7 | PANASONIC | DMW-BCK7 | Li-ion | 900 | 7.2V | \$9.00 | 8 76544 02222 4 |
| SDDMWBLE9 | PANASONIC | DMW-BLE9 | Li-ion | 1000 | 7.4V | \$10.00 | 8 76544 02223 1 |
| SDNP400 | PENTAX | DL-I50 | Li-ion | 1500 | 7.4V | \$11.00 | 8 76544 00354 4 |
| SDDLI63 | PENTAX | DL-I63 | Li-ion | 850 | 3.7V | \$9.00 | 8 76544 00427 5 |
| SDDLI68 | PENTAX | DL-I68 | Li-ion | 1050 | 3.7V | \$9.00 | 8 76544 00420 6 |
| SDDLI78 | PENTAX | DL-I78 | Li-ion | 800 | 3.7V | \$9.00 | 8 76544 00439 8 |
| SDDLI88 | PENTAX | DL-I88 | Li-ion | 900 | 3.7V | \$9.00 | 8 76544 00460 2 |



Battery Price List

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

| ITEM # | BRAND | BRAND CODE | TYPE | mAh | VOLTAGE | PRICE | UPC CODE |
|-------------|---------|------------|--------|------|---------|---------|-----------------|
| SDDLi90 | PENTAX | DL-I90 | Li-ion | 1900 | 7.4V | \$11.00 | 8 76544 00465 7 |
| SDDLi92 | PENTAX | DL-I92 | Li-ion | 900 | 3.6V | \$10.00 | 8 76544 00493 0 |
| SDDLi95 | PENTAX | DL-I95 | Li-ion | 900 | 3.6V | \$10.00 | 8 76544 00494 7 |
| SDDLi109 | PENTAX | DL-I109 | Li-ion | 1200 | 7.4V | \$8.00 | 8 76544 02209 5 |
| SDBNV107 | JVC | BN-V107 | Li-ion | 700 | 7.4V | \$10.00 | 8 76544 00378 0 |
| SDBNV114 | JVC | BN-V114 | Li-ion | 1700 | 7.4V | \$16.00 | 8 76544 00333 9 |
| SDBNV416 | JVC | BN-V416 | Li-ion | 2200 | 7.4V | \$17.00 | 8 76544 00334 6 |
| SDBNV428 | JVC | BN-V428 | Li-ion | 3300 | 7.4V | \$19.00 | 8 76544 00335 3 |
| SDBNVM200 | JVC | BN-VM200 | Li-ion | 800 | 7.4V | \$15.00 | 8 76544 00368 1 |
| SDBNVF707 | JVC | BN-VF707 | Li-ion | 700 | 7.4V | \$12.00 | 8 76544 00372 8 |
| SDBNVF714 | JVC | BN-VF714 | Li-ion | 1400 | 7.4V | \$16.00 | 8 76544 00373 5 |
| SDBNVF733 | JVC | BN-VF733 | Li-ion | 3200 | 7.4V | \$20.00 | 8 76544 00387 2 |
| SDBNVF808 | JVC | BN-VF808 | Li-ion | 1000 | 7.4V | \$18.00 | 8 76544 00486 2 |
| SDBNVF815 | JVC | BN-VF815 | Li-ion | 2000 | 7.4V | \$21.00 | 8 76544 00434 3 |
| SDBNVF823 | JVC | BN-VF823 | Li-ion | 3000 | 7.4V | \$24.00 | 8 76544 00435 0 |
| SDSBL110 | SAMSUNG | SBL110 | Li-ion | 1500 | 7.4V | \$12.00 | 8 76544 00366 7 |
| SDSBL220 | SAMSUNG | SBL220 | Li-ion | 3000 | 7.4V | \$16.00 | 8 76544 00367 4 |
| SDSBL160A | SAMSUNG | SBL160A | Li-ion | 2500 | 7.4V | \$12.00 | 8 76544 00413 8 |
| SDBP70A | SAMSUNG | BP70A | Li-ion | 1500 | 3.7V | \$9.00 | 8 76544 00477 0 |
| SDSDBP90A | SAMSUNG | SBP90A | Li-ion | 1100 | 3.7V | \$11.00 | 8 76544 00395 7 |
| SDSBP180A | SAMSUNG | SBP180A | Li-ion | 2200 | 3.7V | \$13.00 | 8 76544 00396 4 |
| SDBP1310 | SAMSUNG | BP1310 | Li-ion | 1500 | 7.4V | \$11.00 | 8 76544 00492 3 |
| SDSBLSM80 | SAMSUNG | SBLSM80 | Li-ion | 1000 | 7.4V | \$9.00 | 8 76544 00399 5 |
| SDSBLSM160 | SAMSUNG | SBLSM160 | Li-ion | 2000 | 7.4V | \$13.00 | 8 76544 00400 8 |
| SDSLB1674 | SAMSUNG | SLB1674 | Li-ion | 1600 | 7.4V | \$13.00 | 8 76544 00441 1 |
| SDSLB1974 | SAMSUNG | SLB1974 | Li-ion | 2000 | 7.4V | \$16.00 | 8 76544 00398 8 |
| SDSLB1137D | SAMSUNG | SLB1137D | Li-ion | 1200 | 3.7V | \$9.00 | 8 76544 00714 6 |
| SDSLB0837 | SAMSUNG | SLB0837 | Li-ion | 900 | 3.7V | \$8.00 | 8 76544 00416 9 |
| SDSLB0937 | SAMSUNG | SLB-0937 | Li-ion | 900 | 3.7V | \$9.00 | 8 76544 00450 3 |
| SDSLB0637 | SAMSUNG | NP700 | Li-ion | 800 | 3.7V | \$9.00 | 8 76544 00356 8 |
| SASLB0837B | SAMSUNG | SLB0837(B) | Li-ion | 1000 | 3.7V | \$9.00 | 8 76544 00711 5 |
| SDSLB07 | SAMSUNG | SLB-07 | Li-ion | 1000 | 3.7V | \$9.00 | 8 76544 02216 3 |
| SDSLB10A | SAMSUNG | SLB-10A | Li-ion | 1000 | 3.7V | \$10.00 | 8 76544 00440 4 |
| SDIABH125C | SAMSUNG | IABH125C | Li-ion | 1400 | 3.7V | \$9.00 | 8 76544 00491 6 |
| SDIABH130LB | SAMSUNG | IABH130LB | Li-ion | 1500 | 3.7V | \$12.00 | 8 76544 00490 9 |
| SDIABP85ST | SAMSUNG | IA-BP85ST | Li-ion | 1000 | 7.4V | \$14.00 | 8 76544 00487 9 |
| SDIABP85SW | SAMSUNG | IA-BP85SW | Li-ion | 1000 | 7.4V | \$10.00 | 8 76544 00488 6 |
| SDIABP80W | SAMSUNG | IA-BP80W | Li-ion | 900 | 7.4V | \$10.00 | 8 76544 00489 3 |
| SDIABP210E | SAMSUNG | IA-BP210E | Li-ion | 2100 | 7.4V | \$20.00 | 8 76544 02214 9 |
| SDBP85A | SAMSUNG | BP-85A | Li-ion | 950 | 3.7V | \$9.00 | 8 76544 02215 6 |
| SDBP90A | SAMSUNG | IA-BP90A | Li-ion | 900 | 3.7V | \$8.00 | 8 76544 02210 1 |
| SDBP1030 | SAMSUNG | BP-1030 | Li-ion | 1400 | 7.4 | \$10.00 | 8 76544 02225 5 |
| SDENEL1 | NIKON | ENEL1 | Li-ion | 850 | 7.4V | \$8.00 | 8 76544 00336 0 |
| SDENEL2 | NIKON | ENEL2 | Li-ion | 1200 | 3.7V | \$8.00 | 8 76544 00337 7 |
| SDENEL3a | NIKON | ENEL3a | Li-ion | 1700 | 7.4V | \$9.00 | 8 76544 00380 3 |
| SDENEL3e | NIKON | ENEL3e | Li-ion | 1800 | 7.4V | \$13.00 | 8 76544 00401 5 |
| SDEN4 | NIKON | EN-4 | NI-MH | 2400 | 7.4V | \$22.00 | 8 76544 00340 7 |
| SDENEL4 | NIKON | ENEL4 | Li-ion | 2200 | 11.1V | \$29.00 | 8 76544 00339 1 |
| SDENEL5 | NIKON | ENEL5 | Li-ion | 1100 | 3.7V | \$8.00 | 8 76544 00341 4 |



Battery Price List

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

| ITEM # | BRAND | BRAND CODE | TYPE | mAh | VOLTAGE | PRICE | UPC CODE |
|-----------|---------|---------------|--------|------|---------|---------|-----------------|
| SDENEL8 | NIKON | ENEL8 | Li-ion | 850 | 3.7V | \$8.00 | 8 76544 00365 0 |
| SDENEL9 | NIKON | ENEL9 | Li-ion | 1400 | 7.4V | \$14.00 | 8 76544 00402 2 |
| SDENE10 | NIKON | ENEL10 | Li-ion | 850 | 3.7V | \$9.00 | 8 76544 00404 6 |
| SDENEL12 | NIKON | ENEL12 | Li-ion | 1050 | 3.7V | \$9.00 | 8 76544 00449 7 |
| SDENEL11 | NIKON | ENEL11 | Li-ion | 800 | 3.7V | \$9.00 | 8 76544 00437 4 |
| SDENEL14 | NIKON | ENEL14 | Li-ion | 1250 | 7.4 | \$14.00 | 8 76544 02206 4 |
| SDENEL19 | NIKON | ENEL19 | Li-ion | 1000 | 3.7 | \$8.00 | 8 76544 02213 2 |
| SDENEL20 | NIKON | ENEL20 | Li-ion | 1200 | 7.4 | \$10.00 | 8 76544 02226 2 |
| SDFNP30 | FUJI | NP30 | Li-ion | 700 | 3.7V | \$10.00 | 8 76544 00383 4 |
| SDNP40 | FUJI | NP40 | Li-ion | 710 | 3.7V | \$8.00 | 8 76544 00912 6 |
| SDNP45 | FUJI | NP45 | Li-ion | 800 | 3.7V | \$9.00 | 8 76544 00422 0 |
| SDFNP50 | FUJI | NP50 | Li-ion | 1000 | 3.7V | \$9.00 | 8 76544 00423 7 |
| SDNP60 | FUJI | NP60 | Li-ion | 1050 | 3.7V | \$8.00 | 8 76544 00343 8 |
| SDNP70 | FUJI | NP70 | Li-ion | 1300 | 3.7V | \$9.00 | 8 76544 00709 2 |
| SDNP80 | FUJI | NP80 | Li-ion | 1400 | 3.7V | \$8.00 | 8 76544 00344 5 |
| SDNP95 | FUJI | NP95 | Li-ion | 1800 | 3.7V | \$8.00 | 8 76544 00397 1 |
| SDNP120 | FUJI | NP120 | Li-ion | 1800 | 3.7V | \$9.00 | 8 76544 00363 6 |
| SDNP150 | FUJI | NP150 | Li-ion | 1700 | 3.7V | \$16.00 | 8 76544 00405 3 |
| SDNP140 | FUJI | NP140 | Li-ion | 1300 | 7.4V | \$13.00 | 8 76544 00433 6 |
| SDNP20 | CASIO | NP20 | Li-ion | 630 | 3.7V | \$8.00 | 8 76544 00914 0 |
| SDNP30 | CASIO | NP30 | Li-ion | 950 | 3.7V | \$7.00 | 8 76544 00346 9 |
| SDCANP40 | CASIO | NP40 | Li-ion | 1300 | 3.7V | \$8.00 | 8 76544 00347 6 |
| SDNCAP50 | CASIO | NP50 | Li-ion | 1000 | 3.7V | \$9.00 | 8 76544 00412 1 |
| SDCANP60 | CASIO | NP60 | Li-ion | 800 | 3.7V | \$9.00 | 8 76544 00431 2 |
| SDCANP70 | CASIO | NP70 | Li-ion | 1000 | 3.7V | \$9.00 | 8 76544 00447 3 |
| SDNP100 | CASIO | NP100 | Li-ion | 2200 | 7.4V | \$13.00 | 8 76544 00432 9 |
| SDNP110 | CASIO | NP110 | Li-ion | 1200 | 3.7V | \$9.00 | 8 76544 00473 2 |
| SDCANP80 | CASIO | NP80 | Li-ion | 800 | 3.7V | \$9.00 | 8 76544 00456 5 |
| SDCANP90 | CASIO | NP90 | Li-ion | 1950 | 3.7V | \$9.00 | 8 76544 00466 4 |
| SDCANP120 | CASIO | NP120 | Li-ion | 600 | 3.7V | \$9.00 | 8 76544 02205 7 |
| SDNP130 | CASIO | NP-130 | Li-ion | 1800 | 3.7V | \$9.00 | 8 76544 02217 0 |
| SDLi10B | OLYMPUS | Li-10B/Li-12B | Li-ion | 1090 | 3.7V | \$7.00 | 8 76544 00348 3 |
| SDLi20B | OLYMPUS | Li-20B | Li-ion | 1050 | 3.7V | \$9.00 | 8 76544 00349 0 |
| SDLi30B | OLYMPUS | Li-30B | Li-ion | 700 | 3.6V | \$9.00 | 8 76544 00350 6 |
| SDLi40B | OLYMPUS | Li-40B | Li-ion | 800 | 3.7V | \$9.00 | 8 76544 00910 2 |
| SDLi50B | OLYMPUS | Li-50B | Li-ion | 1000 | 3.7V | \$9.00 | 8 76544 00438 1 |
| SDLi60B | OLYMPUS | Li-60B | Li-ion | 800 | 3.7V | \$9.00 | 8 76544 00448 0 |
| SDLi70B | OLYMPUS | Li-70B | Li-ion | 700 | 3.7V | \$9.00 | 8 76544 00474 9 |
| SDLi80B | OLYMPUS | LI-80B | Li-ion | 900 | 3.9V | \$9.00 | 8 76544 00485 5 |
| SDCRV3 | OLYMPUS | CR-V3 | Li-ion | 1400 | 3.0V | \$8.00 | 8 76544 00351 3 |
| SDBLM1 | OLYMPUS | PS-BLM1 | Li-ion | 1500 | 7.4V | \$11.00 | 8 76544 00352 0 |
| SDBLM5 | OLYMPUS | BLM5 | Li-ion | 1850 | 7.4 | \$10.00 | 8 76544 02207 1 |
| SDBLS1 | OLYMPUS | B-LS1 | Li-ion | 1600 | 7.4V | \$12.00 | 8 76544 00419 0 |
| SDNP200 | MINOLTA | NP200 | Li-ion | 750 | 3.7V | \$6.00 | 8 76544 00353 7 |
| SDNP400 | MINOLTA | NP400 | Li-ion | 1500 | 7.4V | \$11.00 | 8 76544 00354 4 |



Battery Price List

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

| ITEM # | BRAND | BRAND CODE | TYPE | mAh | VOLTAGE | PRICE | UPC CODE |
|------------|---------|------------|--------|------|---------|--------|-----------------|
| SDNP500 | MINOLTA | NP500 | Li-ion | 1000 | 3.7V | \$7.00 | 8 76544 00355 1 |
| SDNP700 | MINOLTA | NP700 | Li-ion | 800 | 3.7V | \$9.00 | 8 76544 00356 8 |
| SDNP900 | MINOLTA | NP900 | Li-ion | 900 | 3.7V | \$9.00 | 8 76544 00382 7 |
| SDKLIC5001 | KODAK | KLIC-5001 | Li-ion | 1800 | 3.7V | \$9.00 | 8 76544 00357 5 |
| SDKLIC7001 | KODAK | KLIC-7001 | Li-ion | 900 | 3.7V | \$8.00 | 8 76544 00385 8 |
| SDKLIC7002 | KODAK | KLIC-7002 | Li-ion | 700 | 3.7V | \$9.00 | 8 76544 00386 5 |
| SDKLIC7003 | KODAK | KLIC-7003 | Li-ion | 1000 | 3.7V | \$9.00 | 8 76544 00436 7 |
| SDKLIC7004 | KODAK | KLIC-7004 | Li-ion | 1050 | 3.7V | \$9.00 | 8 76544 00421 3 |
| SDKLIC7005 | KODAK | KLIC-7005 | Li-ion | 800 | 3.7V | \$8.00 | 8 76544 00715 3 |
| SDKLIC7006 | KODAK | KLIC-7006 | Li-ion | 800 | 3.7V | \$8.00 | 8 76544 00716 0 |
| SDKLIC8000 | KODAK | KLIC-8000 | Li-ion | 1800 | 3.7V | \$8.00 | 8 76544 00453 4 |
| SDBP780S | KYOCERA | BP-780S | Li-ion | 850 | 3.7V | \$9.00 | 8 76544 00379 7 |
| SDDBL20 | SANYO | DBL-20 | Li-ion | 800 | 3.7V | \$8.00 | 8 76544 00417 6 |
| SDDBL40 | SANYO | DBL-40 | Li-ion | 1200 | 3.7V | \$8.00 | 8 76544 00418 3 |
| SDDBL50 | SANYO | DBL-50 | Li-ion | 1900 | 3.7V | \$9.00 | 8 76544 00442 8 |
| SD-ABT2W | CISCO | ABT2W | Li-ion | 1400 | 3.7V | \$9.00 | 8 76544 02208 8 |
| SDAHDBT001 | GoPro | AHDBT-001 | Li-ion | 1400 | 3.7 | \$9.00 | 8 76544 02227 9 |



Mini Charger List

| ITEM # | MODEL | BRAND | VOLTAGE | PRICE | UPC # |
|----------|----------------|-----------|---------|-------|-----------------|
| SDM-107 | NP-FT1 | Sony | 4.2 | 9.00 | 8 76544 00107 6 |
| SDM-106 | NP-FC11 | Sony | 4.2 | 9.00 | 8 76544 00106 9 |
| SDM-105 | NP-F570 | Sony | 8.4 | 9.00 | 8 76544 00105 2 |
| SDM-101 | NP-FM50 | Sony | 8.4 | 9.00 | 8 76544 00101 4 |
| SDM-109 | NP, FP,FV, FH | Sony | 8.4 | 9.00 | 8 76544 00109 0 |
| SDM-110 | NP-FR1 | Sony | 4.2 | 9.00 | 8 76544 00110 6 |
| SDM-108 | NP-FS11 | Sony | 4.2 | 9.00 | 8 76544 00108 3 |
| SDM-156 | NP-FE1 | Sony | 4.2 | 9.00 | 8 76544 00156 4 |
| SDM-103 | NP-FA50 | Sony | 8.4 | 9.00 | 8 76544 00103 8 |
| SDM-102 | NP-FF50 | Sony | 8.4 | 9.00 | 8 76544 00102 1 |
| SDM-175 | NP-NPG1 | Sony | 8.4 | 9.00 | 8 76544 00175 5 |
| SDM-1502 | NP-BK1 | Sony | 4.2 | 9.00 | 8 76544 01502 8 |
| SDM-1515 | NP-BN1 | Sony | 4.2 | 9.00 | 8 76544 01515 8 |
| SDM-1530 | FW-50 | Sony | 4.2 | 9.00 | 8 76544 01530 1 |
| SDM-117 | NB-1LH | Canon | 4.2 | 9.00 | 8 76544 00117 5 |
| SDM-118 | NB-2LH | Canon | 8.4 | 9.00 | 8 76544 00118 2 |
| SDM-119 | NB-3L | Canon | 4.2 | 9.00 | 8 76544 00119 9 |
| SDM-120 | NB-4L | Canon | 4.2 | 9.00 | 8 76544 00120 5 |
| SDM-163 | NB-5L | Canon | 4.2 | 9.00 | 8 76544 00163 2 |
| SDM-185 | NB-6L | Canon | 4.2 | 9.00 | 8 76544 00185 4 |
| SDM-198 | NB-7L | Canon | 4.2 | 9.00 | 8 76544 00198 4 |
| SDM-1517 | NB-8L | Canon | 4.2 | 9.00 | 8 76544 01517 2 |
| SDM-1534 | NB-9L | Canon | 4.2 | 9.00 | 8 76544 01534 9 |
| SDM-1547 | NB-10L | Canon | 8.4 | 9.00 | 8 76544 01547 9 |
| SDM-803 | NB-5H | Canon | 8.4 | 10.00 | 8 76544 00803 7 |
| SDM-116 | BP-511 | Canon | 8.4 | 9.00 | 8 76544 00116 8 |
| SDM-104 | BP-945 | Canon | 8.4 | 9.00 | 8 76544 00104 5 |
| SDM-176 | BP-208 | Canon | 8.4 | 9.00 | 8 76544 00176 2 |
| SDM-1503 | BP-808, BP-809 | Canon | 8.4 | 9.00 | 8 76544 01503 5 |
| SDM-1545 | BP-110 | Canon | 8.4 | 9.00 | 8 76544 01545 5 |
| SDM-186 | LP-E5 | Canon | 8.4 | 9.00 | 8 76544 00186 1 |
| SDM-1511 | LP-E6 | Canon | 8.4 | 9.00 | 8 76544 01511 0 |
| SDM-1518 | LP-E8 | Canon | 8.4 | 9.00 | 8 76544 01518 9 |
| SDM-1539 | LP-E10 | Canon | 8.4 | 9.00 | 8 76544 01539 4 |
| SDM-125 | CGR-D08S | Panasonic | 8.4 | 9.00 | 8 76544 00125 0 |
| SDM-128 | CGA-S004 | Panasonic | 4.2 | 9.00 | 8 76544 00128 1 |
| SDM-130 | CGA-DU21 | Panasonic | 8.4 | 9.00 | 8 76544 00130 4 |
| SDM-132 | CGA-S002 | Panasonic | 8.4 | 9.00 | 8 76544 00132 8 |
| SDM-161 | CGA-S005 | Panasonic | 4.2 | 9.00 | 8 76544 00161 8 |
| SDM-162 | CGA-S006 | Panasonic | 8.4 | 9.00 | 8 76544 00162 5 |
| SDM-170 | CGA-S303 | Panasonic | 8.4 | 9.00 | 8 76544 00170 0 |
| SDM-177 | CGA-S007 | Panasonic | 2.4 | 9.00 | 8 76544 00177 9 |
| SDM-178 | CGA-S008 | Panasonic | 2.4 | 9.00 | 8 76544 00178 6 |
| SDM-1508 | BCF10E, BCG10 | Panasonic | 4.2 | 9.00 | 8 76544 01508 0 |
| SDM-1509 | DMW-BLB13 | Panasonic | 8.4 | 9.00 | 8 76544 01509 7 |
| SDM-1521 | DMW-BCH7E | Panasonic | 4.2 | 9.00 | 8 76544 01521 9 |
| SDM-1532 | DMW-BMB9 | Panasonic | 4.2 | 9.00 | 8 76544 01532 5 |
| SDM-1537 | DMW-BLC12 | Panasonic | 4.2 | 9.00 | 8 76544 01537 0 |
| SDM-1538 | DMW-BLD10 | Panasonic | 8.4 | 9.00 | 8 76544 01538 7 |



Mini Charger List

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
800-217-4045

| ITEM # | MODEL | BRAND | VOLTAGE | PRICE | UPC # |
|----------|-------------|-----------|---------|-------|-----------------|
| SDM-1529 | VBK 180/360 | Panasonic | 4.2 | 9.00 | 8 76544 01529 5 |
| SDM-1540 | DMW-BCK7 | Panasonic | 8.4 | 9.00 | 8 76544 01540 0 |
| SDM-1543 | DMW-BLE9 | Panasonic | 4.2 | 9.00 | 8 76544 01543 1 |
| SDM-133 | EN-EL1 | Nikon | 8.4 | 9.00 | 8 76544 00133 5 |
| SDM-134 | EN-EL2 | Nikon | 4.2 | 9.00 | 8 76544 00134 2 |
| SDM-135 | EN-EL3a/e | Nikon | 8.4 | 9.00 | 8 76544 00135 9 |
| SDM-136 | EN-EL5 | Nikon | 4.2 | 9.00 | 8 76544 00136 6 |
| SDM-805 | EN-EL7 | Nikon | 8.4 | 10.00 | 8 76544 00805 1 |
| SDM-113 | EN-EL8 | Nikon | 3.7 | 9.00 | 8 76544 00113 7 |
| SDM-179 | EN-EL9 | Nikon | 8.4 | 9.00 | 8 76544 00179 3 |
| SDM-165 | EN-EL10 | Nikon | 4.2 | 9.00 | 8 76544 00165 6 |
| SDM-187 | EN-EL11 | Nikon | 4.2 | 9.00 | 8 76544 00187 8 |
| SDM-197 | EN-EL12 | Nikon | 4.2 | 9.00 | 8 76544 00197 7 |
| SDM-1531 | EN-EL14 | Nikon | 4.2 | 9.00 | 8 76544 01531 8 |
| SDM-1536 | EN-EL15 | Nikon | 4.2 | 9.00 | 8 76544 01536 3 |
| SDM-1541 | EN-EL19 | Nikon | 4.2 | 9.00 | 8 76544 01541 7 |
| SDM-1549 | EN-EL20 | Nikon | 8.4 | 9.00 | 8 76544 01549 3 |
| SDM-147 | NP30 | Fuji | 4.2 | 9.00 | 8 76544 00147 2 |
| SDM-142 | NP40 | Fuji | 4.2 | 9.00 | 8 76544 00142 7 |
| SDM-1525 | NP50 | Fuji | 4.2 | 9.00 | 8 76544 01525 7 |
| SDM-143 | NP60 | Fuji | 4.2 | 9.00 | 8 76544 00143 4 |
| SDM-164 | NP70 | Fuji | 4.2 | 9.00 | 8 76544 00164 9 |
| SDM-144 | NP80 | Fuji | 4.2 | 9.00 | 8 76544 00144 1 |
| SDM-811 | NP95 | Fuji | 4.2 | 10.00 | 8 76544 00811 2 |
| SDM-146 | NP120 | Fuji | 4.2 | 9.00 | 8 76544 00146 5 |
| SDM-166 | NP150 | Fuji | 4.2 | 9.00 | 8 76544 00166 3 |
| SDM-112 | BNV107 | JVC | 8.4 | 9.00 | 8 76544 00112 0 |
| SDM-111 | 408 | JVC | 8.4 | 9.00 | 8 76544 00111 3 |
| SDM-114 | VM200 | JVC | 8.4 | 9.00 | 8 76544 00114 4 |
| SDM-115 | BNV-F707 | JVC | 8.4 | 9.00 | 8 76544 00115 1 |
| SDM-180 | BNV-F828 | JVC | 8.4 | 9.00 | 8 76544 00816 7 |
| SDM-137 | NP200 | Minolta | 4.2 | 9.00 | 8 76544 00137 3 |
| SDM-138 | NP400 | Minolta | 8.4 | 9.00 | 8 76544 00138 0 |
| SDM-127 | NP700 | Minolta | 4.2 | 9.00 | 8 76544 00127 4 |
| SDM-152 | LB4/NP500 | Minolta | 4.2 | 9.00 | 8 76544 00152 6 |
| SDM-126 | NP900 | Minolta | 3.7 | 9.00 | 8 76544 00126 7 |
| SDM-139 | NP20 | Casio | 4.2 | 9.00 | 8 76544 00139 7 |
| SDM-140 | NP40 | Casio | 4.2 | 9.00 | 8 76544 00140 3 |
| SDM-189 | NP50 | Casio | 4.2 | 9.00 | 8 76544 00189 2 |
| SDM-190 | NP60 | Casio | 4.2 | 9.00 | 8 76544 00190 2 |
| SDM-199 | NP70 | Casio | 4.2 | 9.00 | 8 76544 00199 1 |
| SDM-196 | NP80 | Casio | 4.2 | 9.00 | 8 76544 00196 0 |
| SDM-1514 | NP90 | Casio | 4.2 | 9.00 | 8 76544 01514 1 |
| SDM-1523 | NP110 | Casio | 4.2 | 9.00 | 8 76544 01523 3 |
| SDM-1533 | NP120 | Casio | 4.2 | 9.00 | 8 76544 01533 2 |
| SDM-141 | LI-40B | Olympus | 4.2 | 9.00 | 8 76544 00141 0 |
| SDM-131 | CRV-3 | Olympus | 4.2 | 9.00 | 8 76544 00131 1 |



Mini Charger List

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
800-217-4045

| ITEM # | MODEL | BRAND | VOLTAGE | PRICE | UPC # |
|-----------------|------------------|----------------|------------|-------------|------------------------|
| SDM-148 | L1-10B | Olympus | 4.2 | 9.00 | 8 76544 00148 9 |
| SDM-149 | BLM1 | Olympus | 8.4 | 9.00 | 8 76544 00149 6 |
| SDM-157 | LI-30B | Olympus | 4.2 | 9.00 | 8 76544 00157 1 |
| SDM-192 | LI-50B | Olympus | 4.2 | 9.00 | 8 76544 00192 2 |
| SDM-188 | LI-60B | Olympus | 4.2 | 9.00 | 8 76544 00188 5 |
| SDM-1522 | LI-70B | Olympus | 4.2 | 9.00 | 8 76544 01522 6 |
| SDM-191 | B-LS1 | Olympus | 8.4 | 9.00 | 8 76544 00191 5 |
| SDM-121 | L110 | Samsung | 8.4 | 9.00 | 8 76544 00121 2 |
| SDM-122 | L160A | Samsung | 8.4 | 9.00 | 8 76544 00122 9 |
| SDM-123 | M80 | Samsung | 8.4 | 9.00 | 8 76544 00123 6 |
| SDM-193 | SLB-1974 | Samsung | 8.4 | 9.00 | 8 76544 00193 9 |
| SDM-1512 | SLB-07A | Samsung | 4.2 | 9.00 | 8 76544 01512 7 |
| SDM-1504 | SLB-0737, 0837 | Samsung | 4.2 | 9.00 | 8 76544 01504 2 |
| SDM-1506 | SLB-0837(B) | Samsung | 4.2 | 10.00 | 8 76544 01506 6 |
| SDM-1505 | SLB-0937 | Samsung | 4.2 | 9.00 | 8 76544 01505 9 |
| SDM-1516 | BP-70A | Samsung | 4.2 | 9.00 | 8 76544 01516 5 |
| SDM-1548 | BP-1030 | Samsung | 8.4 | 9.00 | 8 76544 01548 6 |
| SDM-1519 | BP-1310 | Samsung | 8.4 | 9.00 | 8 76544 01519 6 |
| SDM-194 | SB-P90A/SB-P180A | Samsung | 4.2 | 9.00 | 8 76544 00194 6 |
| SDM-823 | SLB-1137D | Samsung | 4.2 | 10.00 | 8 76544 00823 5 |
| SDM-1501 | SLB-10A/ 11A | Samsung | 4.2 | 9.00 | 8 76544 01501 1 |
| SDM-1510 | IA-BH125C | Samsung | 4.2 | 9.00 | 8 76544 01510 3 |
| SDM-1524 | IA-BP210E | Samsung | 4.2 | 9.00 | 8 76544 01524 0 |
| SDM-1526 | IA-BP80W | Samsung | 4.2 | 9.00 | 8 76544 01526 4 |
| SDM-1527 | IA-BP85ST | Samsung | 4.2 | 9.00 | 8 76544 01527 1 |
| SDM-1542 | IA-BP90A | Samsung | 4.2 | 9.00 | 8 76544 01542 4 |
| SDM-158 | KLIC-7001 | Kodak | 4.2 | 9.00 | 8 76544 00158 8 |
| SDM-159 | KLIC-7002 | Kodak | 4.2 | 9.00 | 8 76544 00159 5 |
| SDM-174 | KLIC-7003 | Kodak | 4.2 | 9.00 | 8 76544 00174 8 |
| SDM-160 | KLIC-5001 | Kodak | 4.2 | 9.00 | 8 76544 00160 1 |
| SDM-1525 | KLIC-7004 | Kodak | 4.2 | 9.00 | 8 76544 01525 7 |
| SDM-184 | KLIC-7005 | Kodak | 4.2 | 9.00 | 8 76544 00184 7 |
| SDM-182 | KLIC-7006 | Kodak | 4.2 | 9.00 | 8 76544 00182 3 |
| SDM-181 | KLIC-8000 | Kodak | 8.4 | 9.00 | 8 76544 00181 6 |
| SDM-802 | PSP110 | PSP | 8.4 | 10.00 | 8 76544 00802 0 |
| SDM-807 | BP-780S | Kyocera | 8.4 | 10.00 | 8 76544 00807 5 |
| SDM-167 | DLi-63 | Pentax | 4.2 | 9.00 | 8 76544 00167 0 |
| SDM-1525 | DL-i68 | Pentax | 4.2 | 9.00 | 8 76544 01525 7 |
| | DLi-90 | Pentax | 8.4 | 9.00 | 8 76544 01513 4 |
| SDM-1528 | DLi88 | Pentax | 8.4 | 9.00 | 8 76544 01528 8 |
| SDM-1535 | DL109 | Pentax | 8.4 | 9.00 | 8 76544 01535 6 |
| SDM-195 | DB-L20 | Sanyo | 4.2 | 9.00 | 8 76544 00195 3 |
| SDM-819 | DB-L40 | Sanyo | 4.2 | 10.00 | 8 76544 00819 8 |
| SDM-1520 | DB-L90 | Sanyo | 4.2 | 9.00 | 8 76544 01520 2 |
| SDM-1546 | AHBDT-001 | GoPro | 4.2 | 9.00 | 8 76544 01546 2 |



Digital Camera & Camcorder Cases

| ITEM # | Color | Inner dimensions | Price | UPC # |
|--------|------------|---------------------------|--------|-----------------|
| SDC-21 | Black/Grey | 3.75"H x 2.75"W x 1.25 "D | \$2.95 | 8 76544 00021 5 |
| SDC-22 | Black/Grey | 4.5"H x 2.85"W x 1.25 "D | \$3.49 | 8 76544 00022 2 |
| SDC-26 | Black/Grey | 4.5"H x 6.00"W x 2.00 "D | \$5.95 | 8 76544 00026 0 |

Laptop & Tablet Cases

| ITEM # | Color | For Laptop Size | Inner dimensions | Price | UPC # |
|--------|------------|-----------------|---------------------------|---------|-----------------|
| SDC-31 | Black/Grey | 10" | 12"W x 9.25"H x 1.75 "D | \$15.00 | 8 76544 00031 4 |
| SDC-32 | Black/Grey | 14" | 15.5"W x 11.5"H x 1.6 "D | \$19.00 | 8 76544 00032 1 |
| SDC-33 | Black/Grey | 15" | 15.5"W x 12"H x 1.75 "D | \$20.00 | 8 76544 00033 8 |
| SDC-34 | Black/Grey | 16" | 15.75"W x 12.5"H x 2.1 "D | \$20.00 | 8 76544 00034 5 |



Universal Charger List

| ITEM # | BRAND | MODELS | PRICE | UPC # |
|---------|-----------|--|-------|-----------------|
| SDU-551 | Sony | FT1, F550, FM50, FP50, FH50, FS11, BG1, BD1, BK1 | 12.00 | 8 76544 00551 7 |
| SDU-552 | Canon | NB1L, NB2L, NB3L, NB4L, NB5L, NB6L, NB7L, LPE5, BP511, BP208 | 12.00 | 8 76544 00552 4 |
| SDU-553 | Panasonic | VDB210, S002/S006, S004, S005, S007, S008, S303, S603, | 12.00 | 8 76544 00553 1 |
| SDU-554 | Nikon | EDEL1, EDEL3, EDEL5, EDEL8, EDEL9, EDEL11, EDEL12, | 12.00 | 8 76544 00554 8 |
| SDU-555 | Fuji | NP30, NP40, NP50, NP60, NP70. | 12.00 | 8 76544 00555 5 |
| SDU-556 | JVC | BNVF707, 207, VF808, V607. | 12.00 | 8 76544 00556 2 |
| SDU-557 | Casio | NP20, NP40, NP50, NP60, NP70, NP100. | 12.00 | 8 76544 00557 9 |
| SDU-558 | Olympus | LI10B, BLM1, BLS1, LI40B, LI50B, EDEL11. | 12.00 | 8 76544 00558 6 |
| SDU-559 | Samsung | L110, L160, SM80, SLB1974, SLB1437, SLB10A, P90A | 12.00 | 8 76544 00559 3 |
| SDU-560 | Kodak | KLIC-5000, 7001, 7003, 7000, 7005, 8000 | 12.00 | 8 76544 00560 9 |



Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

Duracell

USA Alkaline Batteries

Blister repack

| Description | Item # | Price/ Pack |
|---------------|---------------|----------------|
| AA | 2-pack DUAA2 | 0.89 |
| AA | 4-pack DUAA4 | 1.49 |
| AAA | 2-pack DUAAA2 | 0.89 |
| AAA | 4-pack DUAAA4 | 1.65 |
| C | 2-pack DUC2 | 2.25 |
| D | 2-pack DUD2 | 2.89 |
| 9 Volt | 1-pack DU9V1 | 1.59 |

Electronic & Remote Batteries

| Description | Type | Voltage | Item # | Price |
|--------------------------|----------|---------|--------|-------------|
| CR2016 | Lithium | 3.0 | CR2016 | 0.89 |
| CR2025 | Lithium | 3.0 | CR2025 | 0.89 |
| CR2032 | Lithium | 3.0 | CR2032 | 0.89 |
| CR1220 | Lithium | 3.0 | CR1220 | 1.39 |
| CR1225 | Lithium | 3.0 | CR1225 | 1.69 |
| CR1616 | Lithium | 3.0 | CR1616 | 1.39 |
| CR1620 | Lithium | 3.0 | CR1620 | 1.59 |
| CR2430 | Lithium | 3.0 | CR2430 | 1.49 |
| CR2450 | Lithium | 3.0 | CR2450 | 1.99 |
| A23, A23BP-2, 23A | Alkaline | 12.0 | A23 | 2.99 |
| A27, 27A | Alkaline | 12.0 | A27 | 3.59 |

Photo Lithium Batteries

| Description | Item # | Price |
|----------------|---------------|-------------|
| CR-123A | 3 volt CR123A | 2.39 |
| CR-2 | 3 volt CR2 | 2.39 |
| 2CR5 | 6 volt 2CR5 | 4.99 |
| CRP2S | 6 volt CRP2S | 4.89 |

Button Batteries

| Description | Type | Voltage | Item # | Price |
|---------------------|----------|---------|--------|-------------|
| 357, SR44SW | Silver | 1.55 | 357 | 1.59 |
| 364, SR621SW | Silver | 1.55 | 364 | 1.09 |
| 371 | Silver | 1.5 | 371 | 1.19 |
| 377, SR626SW | silver | 1.55 | 377 | 1.25 |
| 379 | Silver | 1.55 | 379 | 1.75 |
| 386 | Alkaline | 1.5 | 386 | 1.35 |
| 389 | Silver | 1.5 | 389 | 1.19 |
| 392, SR41W | Silver | 1.55 | 392 | 0.99 |
| 395 | Silver | 1.5 | 395 | 1.19 |

Photo Batteries

| Description | Type | Voltage | Item # | Price |
|---|----------|---------|--------|-------------|
| 76, 76A, A76, LR44, 675A | Alkaline | 1.5 | A76 | 1.25 |
| 76, S76, 76S, MS76, SR44, 357, 303 | Silver | 1.5 | S76 | 1.99 |
| PX28A, 28, 28A, A28, 4LR44 | Alkaline | 6.0 | A28 | 2.69 |
| KS28, 28, 28S, S28, 4SR44 | Silver | 6.0 | S28 | 5.99 |
| 625A, LR9 | Alkaline | 1.5 | 625A | 2.69 |
| 1/3 N, K58L, 2L76 | Lithium | 3.0 | 13N | 4.99 |
| N | Alkaline | 1.5 | N | 1.19 |



Synergy Digital
43 Hall St.
Brooklyn, NY 11205
800-217-4045
Fax: 718-643-9212

Synergy Digital Rechargeable NiMH AA & AAA Batteries & Chargers Price List

| Item # | Description | Price | UPC Code |
|--------|--|---------|-----------------|
| SB-256 | 110/240V Charger Kit <i>Kit Includes: 4 Ultra High Power 2800 mAh AA Batteries, Charger, EU Adapter</i> | \$7.50 | 8 76544 00256 1 |
| SB-257 | Quick 110/240V Charger Kit <i>Kit Includes: 4 Ultra High Power 2800 mAh AA Batteries, Charger, EU Adapter</i> | \$8.50 | 8 76544 00257 8 |
| SB-201 | 4 Ultra High Power 2800 mAh AA Batteries | \$6.00 | 8 76544 00201 1 |
| SB-203 | 10 Ultra High Power 2800 mAh AA Batteries | \$12.00 | 8 76544 00203 5 |
| SB-202 | 4 Ultra High Power 1000 mAh AAA Batteries | \$4.50 | 8 76544 00202 8 |

Free Shipping, for orders of \$500.00
Orders in the amount of \$100.00 of Li-ion Batteries or Chargers,
your AA order will qualify for Free Shipping.



CAMERA REFERENCE GUIDE

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

CAMERA REFERENCE GUIDE

| CAMERA MODEL NAME | BATTEY TYPE | BATTERY # | CAHRGER # |
|---|-------------|---------------|---------------|
| Canon PowerShot EOS Digital Rebel, EOS 10D, 20D, 20Da, 30D, 300D, 40D, D30, D60 | BP-511 | SDBP511 | SDM-116 |
| Canon Rebel XTi , EOS Digital Rebel XT, 350D, 400D | NB-2LH | SDNB2LH | SDM-118 |
| Canon EOS 1D, Mark II, 1DS, 1DS Mark II, 1D Mark II N | NP-E3 | SDNPE3 | |
| Canon PowerShot A5, 50, S10, 20, Pro 70, 90i | NB-5H | SDNB5H | SDM-803 |
| Canon PowerShot G1, G2, G3, G5, G6, Pro 1, Pro 90 IS | BP-511 | SDBP511 | SDM-116 |
| Canon PowerShot S100, S200, S230, S300, S330, S400, S410, S500 | NB-1LH | SDNB1LH | SDM-117 |
| Canon PowerShot S30, S40, S45, S50 | NB-2L | SDNB2LH | SDM-118 |
| Canon PowerShot S60, S70, S80, G7, G9 | NB-2LH | SDNB2LH | SDM-118 |
| Canon PowerShot SD10, SD20, SD100, SD110, SD500, SD550 | NB-3L | SDNB3L | SDM-119 |
| Canon PowerShot SD200, SD300, SD400, SD430, SD450, SD30, SD40, SD600, SD600 | NB-4L | SDNB4L | SDM-120 |
| Canon PowerShot SD700, SD790, SD800, SD850, SD870, SD880, SD890, SD990, SD990 | NB-5L | SDNB5L | SDM-163 |
| Canon EOS 1D Mark III | LP-E4 | SDLPE4 | |
| Canon EOS Rebel XS, EOS Rebel Xsi, EOS 450D, EOS 500D, | LP-E5 | SDLPE5 | SDM-186 |
| Canon Powershot SD770 IS, Digital IXUS 85, SD980 IS, S90, SD1200 IS, D10, | NB-6L | SDNB6L | SDM-185 |
| Canon Powershot G10, G11, | NB-7L | SDNB7L | SDM-198 |
| Canon Powershot A3100, A3000 | NB-8L | SDNB8L | SDM-1517 |
| Canon Powershot SD4500 IS, IXUS 1000HS | NB-9L | SDNB9L | |
| Canon EOS 5D Mark II, EOS 7D, | LP-E6 | SDLPE6 | SDM-1511 |
| Canon EOS Rebel T3, 1100D, Kiss 50, | LP-E10 | SDLPE10 | SDM-1539 |
| Canon EOS Rebel T2i | LP-E8 | SDLPE8 | SDM-1518 |
| Canon PowerShot S2, S3, S5 IS, SX100 IS, A430, A460, A530, A570, A550, A560, A570 | AA NiMH | SB-201 SB-203 | SB-251 SB-252 |
| Casio Exilim EX-S3, S4, S100, Z3, Z4, S500, S770, Z75, Z77, S880 | NP-20 | SDNP20 | SDM-139 |
| Casio QV-R3, R4 | NP-30 | SDNP30 | |
| Casio Exilim EX-P505, P600, P700, EX-Z30, Z40, Z50, Z55, Z57, Z700, Z750, Z1050, | NP-40 | SDCANP40 | SDM-140 |
| Casio Exilim EX-V7, Exilim EX-V8 | NP-50 | SDNP50 | SDM-189 |
| Casio Exilim EX-S10, EX-Z29, EX-Z9, EX-Z80, EX-Z85, EX-Z90, EX-S12, EX-FS10 | NP-60 | SDNP60 | SDM-190 |
| Casio Exilim EX-Z150, EX-Z250 | NP-70 | SDCANP70 | SDM-199 |
| Casio Exilim EX-H10 | NP-90 | SDCANP90 | SDM-1514 |
| Casio Exilim EX-S5, EX-Z270 | NP-80 | SDCANP80 | SDM-196 |
| Casio Exilim Pro EX-F1 | NP-100 | SDNP100 | |
| Casio EX-Z200 | NP-110 | SDNP110 | SDM-1523 |
| Casio Exilim EX-200, EX-200SR, EX-S200EO, EX-S200BE, EX-S200PK | NP-120 | SDNP120 | SDM-1533 |
| Casio Exilim EX-H30, EX-ZR100. | NP-130 | SDNP130 | |
| CISCO Flip Video Ultra HD | ABT2W | SDABT2W | |
| Contax TVS Digital | BP-1500 | SDNP120 | SDM-146 |
| Contax SL300RT | BP-780S | SDBP780S | SDM-807 |
| Epson R-D1 | EU-85 | SDNP80 | SDM-144 |



CAMERA REFERENCE GUIDE

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

| CAMERA MODEL NAME | BATTEY TYPE | BATTERY # | CAHRGER # |
|--|-------------|-----------------|---------------|
| Fuji Finepix F10 | NP-120 | SDNP120 | SDM-146 |
| Fuji Finepix F440, F450, F455 | NP-30 | SDNP30 | SDM-147 |
| Fuji Finepix F402, F700, F810, FZ, Z5, Z1, Z3, F470, F460, F650, V10 | NP-40 | SDNP40 | SDM-142 |
| Fuji Finepix F10fd, J50, J10, J100, J120, J110W, J150W, Z10fd, Z100 fd, Z20, Z37,J | NP-45 | SDNP45 | SDM-141 |
| Fuji Finepix F50fd, F60fd, F100fd, F70EXR, F200 EXR | NP-50 | SDNP50 | SDM-1525 |
| Fuji Finepix 50i, 501, 601, F401, F410, F601, F602, M603 | NP-60 | SDNP60 | SDM-143 |
| Fuji Caplio Pro 10, Digimax U-CA-4, Digimax V700, Easysshare One, Exilim QV | NP-60 | SDNP60 | SDM-143 |
| Fuji PDR-T20, PDR-T30, Photosmart R607, Photosmart R707, SV-AV100, SV | NP-60 | SDNP60 | SDM-143 |
| Fuji Finepix 4200, 4800, 4900, 6800, 6900, MX-1700, 2700, 2900 | NP-80 | SDNP80 | SDM-144 |
| Fuji Finepix F20, F40fd | NP-70 | SANP70 | SDM-164 |
| Fuji Finepix F30, F31 | NP-95 | SDNP95 | SDM-811 |
| Fuji Finepix S200 EXR | NP-140 | SDNP140 | |
| Fuji Finepix S5 Pro, IS Pro | NP-150 | SDNP150 | SDM-166 |
| Fuji Finepix A170, S1500, A150, A100 | AA NiMH | SB-201 - SB-203 | SB-251-SB-252 |
| Hewlett Packard PhotoSmart R607, 707 | R07 | SDNP60 | SDM-143 |
| Kodak EasyShare DX-7440, 7590,LS420, 443, 633, 743, 753. | KLIC-3000 | SDNP80 | SDM-144 |
| Kodak EasyShare DX-6490, 7590, 7440, 7630, Z730, Z7590, 760. | KLIC-5001 | SDKLIC5001 | SDM-160 |
| Kodak EasyShare LS-420, 443, 473, 743, 752, 753 | KLIC-5000 | SDNP60 | SDM-143 |
| Kodak EasyShare One, Z730, Z760, Z7590, DX-7440, 7630 | KLIC-5000 | SDNP60 | SDM-143 |
| Kodak EasyShare LS 755 | KLIC-7000 | SDENEL8 | SDM-113 |
| Kodak EasyShare V550, V570, V610, V705, C875, M753, M853, M320, M340, M1063. | KLIC-7001 | SDKLIC7001 | SDM-158 |
| Kodak EasyShare V530 | KLIC-7002 | SDKLIC7002 | SDM-159 |
| Kodak EasyShare V803, V1003, M341, Z950, M381, M380, | KLIC-7003 | SDKLIC7003 | SDM-174 |
| Kodak EasyShare V1233, V1253, M1093 IS | KLIC-7004 | SDKLIC7004 | |
| Kodak EasyShare C763 | KLIC-7005 | SAKLIC7005 | SDM-184 |
| Kodak EasyShare M873, M883 | KLIC-7006 | SAKLIC7006 | SDM-182 |
| Kodak EasyShare Z612, Z712 IS, Z812 IS, Z8612, Z1085 IS, Z1485 IS, Z1015 IS | KLIC-8000 | SMKLIC8000 | SDM-181 |
| Kodak Easy Share Z915, C140, Z980, C913, C1013, C713 | AA NiMH | SB-201 - SB-203 | SB-251-SB-252 |
| Kyocera/Yashica Finecam SL-300R, 400R | BP-780 | SDBP780 | SDM-807 |
| Minolta Dimage X, Xg, Xi, Xt | NP-200 | SDNP200 | SDM-137 |
| Minolta Dimage G500 | NP-500 | SDNP500 | SDM-152 |
| Minolta Dimage A200 | NP-800 | SDENEL1 | SDM-133 |
| Minolta Dimage G400, G600 | NP-600 | SDNP500 | SDM-152 |
| Minolta DiIMAGE E40, E50 /Kyocera Yashica EZ4033 | NP-900 | SDNP900 | SDM-126 |
| Minolta Dimaga X50 | NP-700 | SNP700 | SDM-127 |
| Minolta Dimage Maxxum 7D, Dimage A1, A2 | NP-400 | SDNP400 | SDM-138 |
| Nikon Coolpix 775, 880, 885, 950, 995 | EN-EL1 | SDENEL1 | SDM-133 |
| Nikon Coolpix 2500, 4300, 4500, 4800, 5000, 5400 5700, 8700 | EN-EL1 | SDENEL1 | SDM-133 |



CAMERA REFERENCE GUIDE

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

| CAMERA MODEL NAME | BATTEY TYPE | BATTERY # | CAHRGER # |
|---|-------------|-----------|-----------|
| Nikon Coolpix S1, S51, S51c | EN-EL8 | SDENEL8 | SDM-113 |
| Nikon D70, D100 | EN-EL3 | SDENEL3 | SDM-135 |
| Nikon D70, D100 | EN-EL3a | SDENEL3a | SDM-135 |
| Nikon D200, D80, D90, D300, D700 | EN-EL3e | SDENEL3e | SDM-135 |
| Nikon D1, D1H, D1X | EN-4 | SDEN4 | |
| Nikon D2h, D2Hs, D2X | EN-EL4 | SDENEL4 | |
| Nikon Coolpix 3500, SQ | EN-EL2 | SDENEL2 | SDM-134 |
| Nikon Coolpix 3700, 4200, 5200, 5900, 7900, P5100 | EN-EL5 | SDENEL5 | SDM-136 |
| Nikon Coolpix 775, 880, 885, 950, 995 | EN-EL1 | SDENEL1 | SDM-133 |
| Nikon Coolpix 8400, 8800 | EN-EL7 | SAENEL7 | SDM-805 |
| Nikon D40, D40X, D60 | EN-EL9 | SDENEL9 | SDM-179 |
| Nikon Coolpix P50, S200, S210, S500, S510, S520, S60, S600, S700, | EN-EL10 | SDENEL10 | SDM-165 |
| Nikon Coolpix S550, S560 | EN-EL11 | SDENEL11 | SDM-187 |
| Nikon Coolpix S610C, S710 | EN-EL12 | SDENEL12 | SDM-197 |
| Nikon Coolpix P7000, | EN-EL14 | SDENEL14 | SDM-1531 |
| Nikon D7000 | EN-EL15 | | SDM-1536 |
| Nikon S3100, S4100 | EN-EL19 | SDENEL19 | |

| | | | |
|--|---------|-----------------|---------------|
| Olympus SP-310,SP-320,SP-350, SP-500,SP-700 | CRV-3 | SDCRV3 | SDM-131 |
| Olympus E-1, Evolt E-300, E-410, E510, E-30 | BLM-01 | SDBLM1 | SDM-149 |
| Olympus C-5060, 7070, 8080 | BLM-01 | SDBLM1 | SDM-149 |
| Olympus Evolt E-400, E-410,PEN E-P1, E-620 | BLS1 | SDBLS1 | SDM-191 |
| Olympus E-1, E-3, E-5, E-30 | BLM-5 | SDBLM5 | |
| Olympus IR-500, C-50, 60, 765, 770, 5000, Stylus 300, 400, 410, 800, 810 | Li-10B | SDLI10B | SDM-148 |
| Olympus C-60, 7000, D-590, Stylus 500 | Li-12B | SDLI10B | SDM-148 |
| Olympus Ferrari Digital Model 2004 | Li-20B | SDLI20B | SDM-143 |
| Olympus Stylus Verve, Verve S | Li-30B | SDLI30B | SDM-157 |
| Olympus D-630, IR-300, SP-700, Stylus 700, 710, 720, 725 SW, 730, 740, 750, 760, 7 | Li-40B | SDLI40B | SDM-141 |
| Olympus FE-20, Fe-150, Fe-190, Fe-230, Fe-240, Fe-250, Fe-280, Fe-300, Fe | Li-40B | SDLI40B | SDM-141 |
| Olympus Fe-20, 370, Stylus 1010, 1020, 1030, 1040, 6010, 7010, 8000, 6000, 9000, | Li-50B | SDLI50B | SDM-192 |
| Olympus FE-370 | Li-60B | SDLI60B | SDM-188 |
| Olympus FE-4020 | LI-70B | SDLI70B | SDM-1522 |
| Olympus T-100 | LI-80B | SDLI80B | |
| Olympus SP-590, FE-45, SP-565, FE-310, | AA NiMH | SB-201 - SB-203 | SB-251-SB-252 |

| | | | |
|---|-------------|-----------|----------|
| Panasonic Lumix DMC-FZ1, 3, 4, 5, 10, 20, LC20, FC10 | CGA-S002A1B | SDCGAS002 | SDM-132 |
| Panasonic Lumix DMC-FX7 | CGA-S004A1B | SDNP40 | SDM-128 |
| Panasonic Lumix DMC-FX8, FX9, DMC-FX33, FX55 | CGA-S005 | SDCGAS005 | SDM-161 |
| Panasonic Lumix DMC-TZ1, DMC-TZ3, DMC-TZ4, DMC-TZ5 | CGA-S007 | SDCGAS007 | SDM-177 |
| Panasonic Lumix DMC-FZ30, DMC FZ18, DMC-FZ28 | CGA-S006 | SDCGAS006 | SDM-162 |
| Panasonic Lumix FX30, DMC-FS20, DMC-FS3, DMC-FS5, DMC-FX33, DMC-FX35, D | CGA-S008 | SDCGAS008 | SDM-178 |
| Panasonic Lumix DMC-TZ6, DMC-TZ7 | DMW-BCG10E | SDBC10 | |
| Panasonic Lumix DMC-TS1, DMC-FX580, DMC-FX48, DMC-FS25, DMC-FS1 | DMW-BCF10 | SDBC10 | SDM1508 |
| Panasonic G1 SLR, DMC-GH1 | DMW-BLB13 | SDBLB13 | SDM-1509 |



CAMERA REFERENCE GUIDE

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

| CAMERA MODEL NAME | BATTEY TYPE | BATTERY # | CAHRGER # |
|---|-------------|------------|-----------|
| Panasonic Lumix DMC-L1 | CGR-S603E | SDCGRS603E | SDM-171 |
| Panasonic Lumix DMC-FP1, FP2, FP3 | DMWBCH7E | SDDMWBCH7E | |
| Panasonic Lumix DMC-FZ100, DMC-FZ40, DMC-FX45, DMC-FX48 | DMW-BMB9 | SDDMWBMB9 | SDM-1532 |
| Panasonic Lumix DMC-GH2 | DMW-BLC12 | SDDMWBLC12 | SDM-1537 |
| Panasonic Lumix DMC-GF2 | DMW-BLD10 | SDDMWBLD10 | SDM-1538 |
| Panasonic Lumix DMC-GF3, DMC-S6K | DMW-BLE9 | SDDMWBLE9 | SDM-1543 |
| Panasonic Lumix DMC-LX5 | DMW-BCJ13 | SDDMWBCJ13 | SDM-1508 |

| | | | |
|--|---------|-----------------|---------------|
| Pentax Optio 450, 550, 555, 750Z, MX, MX4 | D-LI7 | SDNP120 | SDM-146 |
| Pentax Optio 330, 330GS, 330RS, 430, 430RS | D-LI2 | SDNP60 | SDM-143 |
| Pentax Optio 230, S, S4i, S5i, S5n, SV, WP, X | D-LI8 | SDNP40 | SDM-142 |
| Pentax K10D, K20D | D-LI50 | SDNP400 | SDM-138 |
| Pentax Optio M30, T30 & W30 | D-LI63 | SADLI63 | SDM-167 |
| Pentax Optio S10, A40, S12 | D-LI68 | SDDLI68 | |
| Pentax Optio M50, M60, V20, W60, W80, | D-LI78 | SDDLI78 | |
| Pentax Optio P70, P80, WS80 | D-Li88 | SDDLI88 | SDM-1528 |
| Pentax K7D | D-Li90 | SDDLI90 | SDM-1513 |
| Pentax X70 | D-LI92 | SDDLI92 | |
| | | SDDLI95 | |
| Pentax KR | D-LI109 | | SDM-1535 |
| Pentax Optio E80, K-x, E70, K2000, E60, K200D, | AA NiMH | SB-201 - SB-203 | SB-251-SB-252 |

| | | | |
|--|-----------|-----------------|---------------|
| Sony CyberShot DSC-T50, T30, DSC-F88, P100, 110, 120, 150, 200, V3, | NP-FR1 | SDNPF1 | SDM-110 |
| Sony CyberShot DSC-N2, DSC-L1, M1, M2, T1, T10, T33 | NP-FT1 | SDNPF1 | SDM-107 |
| Sony CyberShot DSC-P1 | NP-FS11 | SDNPF11 | SDM-108 |
| Sony CyberShot DSC-F77,P2, P3, P5, P7, P8, P9, P10, V1 | NP-FC11 | SDNPF11 | SDM-106 |
| Sony Mavica MVC-FD100,FD200 | NP-F500 | SDNPF550 | SDM-105 |
| Sony CyberShot DSC-F707, 717, 828, S30, S50, S70, S75, S85 | NP-FM50 | SDNPFM50 | SDM-101 |
| Sony Mavica MVC-FD250, 400, CD350, 500 | NP-FM50 | SDNPFM50 | SDM-101 |
| Sony CyberShot DSC-T7 | NP-FE1 | SDNPF1 | SDM-156 |
| Sony DSC-T70, DSC-T200, TX1, T900, T90, G3, T77, T300, T2, | NP-FD1 | SA-NPBD1 | SDM-110 |
| Sony DSC-S750, S780, S980, S950, | NP-BK1 | SD-NPBK1 | SDM-1502 |
| Sony CyberShot DSC-N1, N2, W100, W35, W50, W70, T100, T20, H7, H9, W200, W9 | NP-BG1 | SDNFBG1 | SDM-175 |
| Sony CyberShot SC-TX5, DSC-TX7, DSC-TX9, DSC-W310, DSC-W320, DSC-W330, | NP-BN1 | SDNFBN1 | SDM-1515 |
| Sony Alpha DSLR-A350, A100, A20, A700, A900, A550, A500, A850, A300, A350, A20 | NP-FM500H | SDNPFM500H | SDM-101 |
| Sony Alpha DSLR-A100 | NP-F55H | SANPFM55H | SDM-101 |
| Sony CyberShot DSC-Wx1, W230, W220 | NP-FG1 | SDNPF1 | SDN-175 |
| Sony CyberShot DSC-S930, S730 | AA NiMH | SB-201 - SB-203 | SB-251-SB-252 |
| Sony Alpha NEX-5, NEX-3 | NP-FW50 | SDFW50 | SDM-1530 |

| | | | |
|---|-------------|------------|----------|
| Samsung Pro 815 | SLB-1974 | SDSLB1974 | SDM-193 |
| Samsung Digimax L50, i6, L60, NV 3, NV 7, L73, L700, SL30, ES15 | SLB-0837 | SLB0837 | SDM-1504 |
| Samsung NV10, NV15, NV20, SL201 | SLB-0837(B) | SASLB0837B | SDM-1506 |



CAMERA REFERENCE GUIDE

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

| CAMERA MODEL NAME | BATTEY TYPE | BATTERY # | CAHRGER # |
|---|-------------|-----------------|----------------|
| Samsung L730, L830, NV4, i8, PL10 | SLB-0937 | SDSLB0937 | SDM-1505 |
| Samsung NV11, LV74, NV100HD, NV24HD | SLB-1137D | SDSLB1137D | SDM-823 |
| Samsung L77 | SLB-0637 | SDNP700 | SDM-127 |
| Samsung GX10, GX20 | SLB-1674 | SLB1674 | |
| Samsug TL90, TL210, TL220, TL225, ST600. | SLB-07 | SDSLB07 | SDM-1512 |
| Sansung PL70, WB550, SL820, SL620, SL202, ES55, L310W, NV9, | SLB-10A | SDSLB10A | SDM-1501 |
| Samsung HMX-R10 | IA-BH125C | SDIABH125C | SDM-1510 |
| Samsung AQ100, ES65, ES70, ES73, PL100, PL80, SL50, SL600, SL605, SL630, ST | BP-70A | SD-BP70A | SDM-1516 |
| Samsung NX10 | BP-1310 | SD-BP1310 | SDM-1519 |
| Samsung SC-HMX10,SC-HMX20 and SC-MX10 | IA-BP85ST | SDIABP85ST | SDM-1527 |
| Samsung: VP-DX10, VP-DX10A, VP-DX10/XEU | IA-BP85SW | SDIABP85SW | SDM-1527 |
| Samsung SC-D382,D103,DX205 | IA-BP80W | SDIABP80W | SDM-1526 |
| Samsung WB210, SH100, PL210. | BP-85A | SDBP85A | |
| Samsung S760, S860, S830 | AA NiMH | SB-201 - SB-203 | SB251 - SB-252 |
| Leica D-LUX 3 | BP-DC4 | SDCGAS005 | SDM-161 |
| Leica V-LUX 1 | | SDCGAS006 | SDM-162 |



CAMCORDER REFERENCE GUIDE

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

CAMCORDER REFERENCE GUIDE

| Camcorder Model Name | Battery Type | Battery Item # | Charger Item # |
|--|--------------------------------|-----------------------------------|------------------------------------|
| SONY | | | |
| Sony Handycam DCR-VX2100, HDR-FX1, HVR-Z1U | NP-F570 NP-F770 NP-F970 | SDNPF570 SDNPF770 SDNPF970 | SDM-105 SDM-105 SDM-105 |
| Sony DCR-DVD7, HC-90, PC1000, PC55 | NP-FA50 NP-FA70 | SDNPFA50 SDNPFA70 | SDM-103 SDM-103 |
| Sony DCR-HC1000, IP, IP220, IP5, IP55, IP7BT, PC109, PC350 | NP-FF70 | SDNPF70 | SDM-102 |
| Sony DCR-DVD203, 403, 92, DCR-HC20, 30, 40, 42, 65, 85. DCR-SR40, DCR-SR60, DCR-SR80 | NP-FP50 NP-FP70 NP-FP90 | SDNPF50 SDNPF70 SDNPF90 | SDM-109 SDM-109 SDM-109 |
| Sony DCR-HC, DCR-DVD, DCR-SR, HDR-HC, HDR-UX Series, DCR-CX7, HDR-CX7, HDR-SR5, HDR-SR7, HDR-SR8, Sony DCR-DVD103, DVD105, DVD108, DVD203, DVD205, DVD305, DVD308, DVD403, DVD405, DVD408, DVD505, DVD508, DVD92, HC20, HC21, HC26, HC28, HC30, HC32, HC36, HC38, HC40, HC42, HC46, HC48, HC65, HC85, HC96, SR100, SR200, SR200C, SR300, SR300C, SR40, SR42, SR42A, SR60, SR62, SR80, SR82, SR82C, HDR-HC3, HDR-HC5, HDR-HC7, HDR-UX5, HDR-UX7 | NP-FH70 NP-FH50 NP-FH100 | NP-FH70 NP-FH50 NP-FH100 | SDM-109 SDM-109 SDM-109 |
| HDR-HC5, DCR-SR200, DCR-SR300C, DCR-DVD308, HDR-SR5, DCR-DVD508, HDR-UX5, DCR-SR42A, HDR-SR8, HDR-CX7, DCR-SR42, DCR-SR300, DCR-SR62, DCR-SR82, DCR-HC96, HDR-UX7, HDR-HC7, HDR-SR7, DCR-DVD108, DCR-DVD408, DCR-SR82C, DCR-HC48, DCR-SR200C, HDR-SR5C, DCR-HC28, DCR-HC38 | NP-FV70 NP-FV50 NP-FV100 | SDNPFV50 SDNPFV70 SDNPFV100 | SDM-109 SDM-109 SDM-109 |
| Sony CCD-TRV108, TRV118, TRV128, TRV138, TRV308, TRV318, TRV328, TRV338, TRV607, DCR- DVD100, 101,200,201, 300,301, DCR-PC100, 101,105, 110, 115, 120bt, 330, 9, DCR-TRV10, 11, 140, 17, 18, 19, 20, 22, 230, 240, 25, 250, 260, 27, 280, 30, 33, 330,340, 350, 360, 38, 39, 460, 480, 50, 530, 6, 70, 730, 740, 8, 830, 840, 950, DSC-F707, 717, 828, S30,S50,S70, S75, S85,DSR-PDX10, GV-D1000, MVC-CD200,250, 300, 350, 400, 500, | NP-FM50 NP-QM71 NP-QM91 | SDNPFM50 SDNPQM71 SDNPQM91 | SDM-101 SDM-101 SDM-101 SDM-101 |
| CANON | | | |
| Canon ES50, ES65, GL1, GL2, XL1, XL1S, ZR. | BP-915 BP-930 BP-945 | SDBP915 SDBP930 SDBP945 | SDM-104 SDM-104 SDM-104 |
| Canon Optura, Optura 10, 100MC, 20, 200MC, Pi, Xi, ZR10, ZR20, 25MC, 30MC, 40, 45MC, 50MC, 60, 65MC, 70MC, 80, 85, 90, MV30, MV30i, MV300, MV400, MV400i, MV430, MV450, MV450i, MV500, MV500i, MV530i, MV550i, MV600i, MV630i, MV650i, MVx1i, MVX100i, MVX150i, MVX2i, | BP-511 BP-522 BP-535 | SDBP511 SDBP522 SDBP535 | SDM-116 SDM-116 SDM-116 |
| Canon Elura 40, 50, 60, 70, 90, Optura 30,40, 400, 50, 500, 60, ZR100, ZR200, ZR300, ZR400, ZR500, ZR600, ZR700, ZR800, ZR830, ZR850, HG10, HV20, VIXIA HV30 | BP-2L12 | SDBP2L12 | SDM-118 |
| Canon Otura S1, Elura 100, DC10, DC20, DC40, DC100 | BP-208 | SDBP208 | SDM-104 |



CAMCORDER REFERENCE GUIDE

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

| Camcorder Model Name | Battery Type | Battery Item # | Charger Item # |
|--|------------------|----------------------|-----------------------|
| Canon Optura 600 | BP-308 BP-315 | SDBP-308 SDBP-315 | SDM-804 |
| Canon Elura 80, 85, 90, Optura 50, 60, ZR100, ZR200, ZR300, ZR400, ZR500, ZR600, ZR700, HG10, VIXIA HV30 | NB-2lh | SDNB2LH | SDM-118 |
| Canon VIXIA HF11, HG21, HG20, HF100, HF10, HF20, HF200 | BP-809 | SDBP809 | SDM-1503 |
| Canon Vixia HF100, HF10, HF11, HG21, HG20, HF S10, HF S100, HF20, HF200 | BP-819 | SDBP819 | SDM-1503 |
| Canon HG-20, HG21 | BP-827 | SDBP827 | SDM-1503 |
| Canon Vixia HF R20, R21, R200. Legria HF R26, R28, R206 | BP-110 | SDBP110C | included with Battery |

PANASONIC

| | | | |
|---|--|--|-------------------------------|
| Panasonic SDR-S100, SDR-S100EG-S and SDR-S300 | CGA-S303 | SDCGAS303 | SDM-170 |
| Panasonic PV-GS200, GS120, GS55, GS70, GS50, GS500, GS300, GS180, GS39, GS59, GS36, GS29, VDR-M70, M50, M30, VDR-D100, D200, D250, D300 | CGA-DU14A CGA -DU21 | SDDU14 SDDU21 | SDM-130 SDM-130 |
| Panasonic PV-GS15, 14, 12, 9, PV-DV953, 203, 103, 73, 53, 952, 852, 702, 602, 402, 202, 102, 52 PV-VM202 | CGR-D08 CGR-D16 CGR-D28 CGR-D54 | SDCGRD08 SDCGRD16 SDCGRD28 SDCGRD54 | SDM-125 SDM-125 SDM-125 |
| HDC-SD1, TM/HS 700 Series | SDVWVBG130 | VWVBG130 | SDM-130 |
| AG-HMC70/150 | SDVWVBG260 | VWVBG260 | SDM-130 |
| Sony HDC-HS300, HDC-TM300, HDC-HS250, HDC-SD100, HDC-HS10 | SDVWVBG6 | VWVBG6 | SDM-130 |
| T55, T50, S50, S45, H810 | VBK 180/360 | | SDM-1529 |

JVC

| | | | |
|--|-----------|----------|---------|
| JVC GR-DVP7, GR-DVP3 | BN-V114SU | SDBNV114 | SDM-112 |
| JVC GR-DVL805, GR-DVL507, GR-DVL505, GR-DVL500, GR-DVL307, GR-DVL305, GR-DVL300, GR-DVL100 | BN-V416U | SDBNV416 | SDM-111 |
| JVC GR-DVP9US, DVP7U | BN-V107 | SDBNV107 | SDM-112 |
| JVC GZ-MC100, 200. | BN-V100 | SDBNV100 | SDM-114 |



CAMCORDER REFERENCE GUIDE

Synergy Digital
 43 Hall St.
 Brooklyn, NY 11205
 718-643-2742
 800-217-4045

| Camcorder Model Name | Battery Type | Battery Item # | Charger Item # |
|---|----------------------------------|-------------------------------------|-------------------------------|
| JVC GR-DVL915, GR-DVL820, GR-DVL920, GR-DVL815 | BN-V428U | SDBNV428 | SDM-111 |
| JVC GR-D250, GR-D270, GR-D290, GR-D295, GR-D350, GR-D370, GR-D395, GR-D396, GR-D650, DF430,DF450, GZ-M505, GZ-M21, GZ-M27, GZ-M37, GZ-M77 | BN-VF707 BN-VF714 BN-VF733 | SDBNVF707 SDBNVF714 SDBNVF733 | SDM-115 SDM-115 SDM-115 |
| GR-DA30US, GZ-MG150US, GZ-MG255US, GZ-MG330AUS, GZ-MG330RUS, GZ-MG335HUS, GZ-MG335WUS, GZ-MG340BUS, GZ-MG360BUC, GZ-MG360BUS, GZ-MG365BUS, GZ-MG430HUS, GZ-MG435HUS, GZ-MG465BUS, GZ-MG730BUS | BN-VF808 | SDBNVF808 | SDM-180 |
| JVC GZ-MG130, GZ-MG555, GR-D796, GZ-MG255, GR-D770, GZ-MG155, GR-D750, GZ-MG730, GR-D850, GR-D870, GR-DA30, GZ-HD3, GZ-HD7, GZ-MG335, GZ-MG360,GZ-MG365, | BN-VF815 BN-VF823 | BN-VF815 BN-VF823 | SDM-180 SDM-180 |

SAMSUNG

| | | | |
|--|----------------------------|-------------------------|--------------------|
| Samsung SC-D105, SC-D130, SC-D180, SC-D190, SC-D20, SC-D21, SC-D23, SC-D24, SC-D27, SC-D29, SC-D33, SC-D34, SC-D39, SC-D55, SC-D60, SC-D67, SC-D70, SC-D73, SC-D75, SC-D77, SC-D80, SC-D86, SC-D87, VP-D55 | SB-L110 SB-L220 | SDSBL110 SDSBL220 | SDM-122 |
| Samsung SC-L530, Samsung VP-L800, Samsung SC-D67, Samsung SC-L770, Samsung VP-L530, Samsung VP-M53, Samsung SC-M53, Samsung SC-D180, Samsung SC-L710, Samsung VP-L500, Samsung VP-M51, Samsung SC-M51, Samsung SC-D87, Samsung SC-D303 | SB-L110A SB-L160A SB-L220A | SDSBL160A | SDM-121 |
| Samsung M110, L120 | SLB10A | SDSLB10A | SDM-1501 |
| Samsung SC-M102, SC-M105, SC-M10, SC-M110 | SB-P90A SB-P180A | SDSBP90A SDSBP180A | SDM-194 |
| Samsung HMX-H200, H204, H205, H300, H304, S10, S15, S16, SMX-F40, F43, F44, F50 | IA-BP210E | SDIABP210E | SDM-1524 |
| Samsung SC-D263, SC-D351, SC-D353, SC-D453, SC-D455, SC-D363, SC-D365, SC-D453, SC-D164, SC-D653, SC-D655 | SB-LSM80 SB-PLSM160 | SDSBLSM80 SDSBLSM160 | SDM-123 SDM-123 |
| Samsung C10, C14, K40, K44, K45 | IA-BH130LB | SDIABH130LB | |
| Samsung HMX-E10, E100. | BP-90A | SD-BP90A | SDM-1542 |

| | | | |
|---------------|--------|---------|---------|
| Sanyo | DB-L20 | SDDBL20 | SDM-818 |
| Sanyo VPC-HD1 | DB-L40 | SDDBL40 | SDM-819 |



CAMCORDER REFERENCE GUIDE

Synergy Digital
43 Hall St.
Brooklyn, NY 11205
718-643-2742
800-217-4045

| Camcorder Model Name | Battery Type | Battery Item # | Charger Item # |
|----------------------|--------------|----------------|----------------|
| Sanyo VPC-HD1000 | DB-L50 | SDDBL50 | |



CAMCORDER REFERENCE GUIDE

Synergy Digital
43 Hall St.
Brooklyn, NY 11205
718-643-2742
800-217-4045



CAMCORDER REFERENCE GUIDE

Synergy Digital
43 Hall St.
Brooklyn, NY 11205
718-643-2742
800-217-4045



CAMCORDER REFERENCE GUIDE

Synergy Digital
43 Hall St.
Brooklyn, NY 11205
718-643-2742
800-217-4045



CAMCORDER REFERENCE GUIDE

Synergy Digital
43 Hall St.
Brooklyn, NY 11205
718-643-2742
800-217-4045